DRP-1

SERVICE MANUAL

US Model
Canadian Model
AEP Model
UK Model
E Model

WIRING DIAGRAM

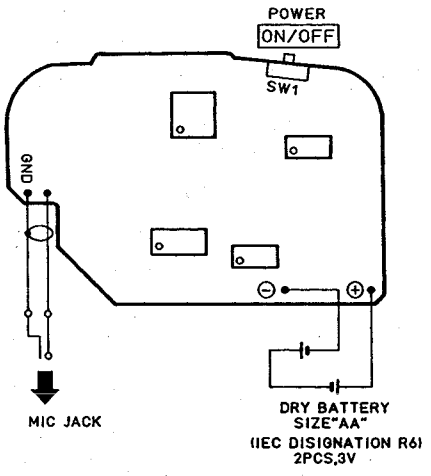

EXPLODED VIEW

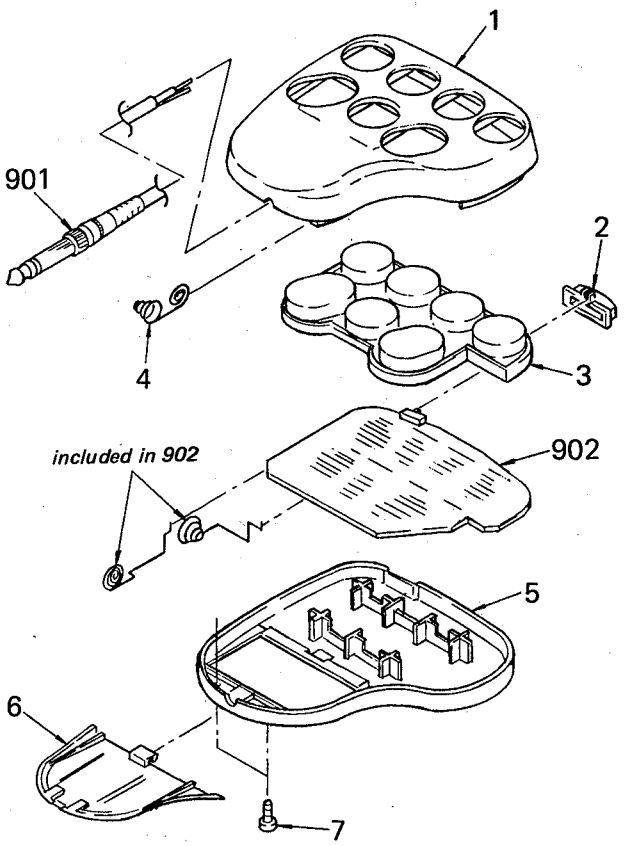

PARTS LIST

No.	Part No.	Description
1	9-994-435-01	CASE A
2	9-994-442-01	KNOB, SLIDE
3	9-994-438-01	SHEET, RUBBER
4	9-994-440-01	CONTACT SPRING
5	9-994-436-01	CASE B
6	9-994-437-01	LID, BATTERY
7	7-685-104-19	SCREW +PTP 2X6 TYPE2 NON-SLIT
901	9-994-439-01	CORD WITH PLUG
902	9-994-441-01	MOUNTED PCB, PW

ACCESSORY & PACKING MATERIAL

3-786-652-11	MANUAL, INSTRUCTION
*4-925-779-01	INDIVIDUAL CARTON
*4-925-781-01	FRAME, INNER

- Items marked "★" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

DRUM PAD

SONY®

MICROFILM

9-953-462-11

Sony Corporation
Audio Group

English
88H0275-1
Printed in Japan

©1988.8

Published by A/V Engineering Service Dept.